 


WS12000 Touchless-Dispense Foot Pedal Installation Guide

Below are instructions for installing the WS12000 Touchless-Dispense Foot Pedal.


Part number: WS12000PDLKIT

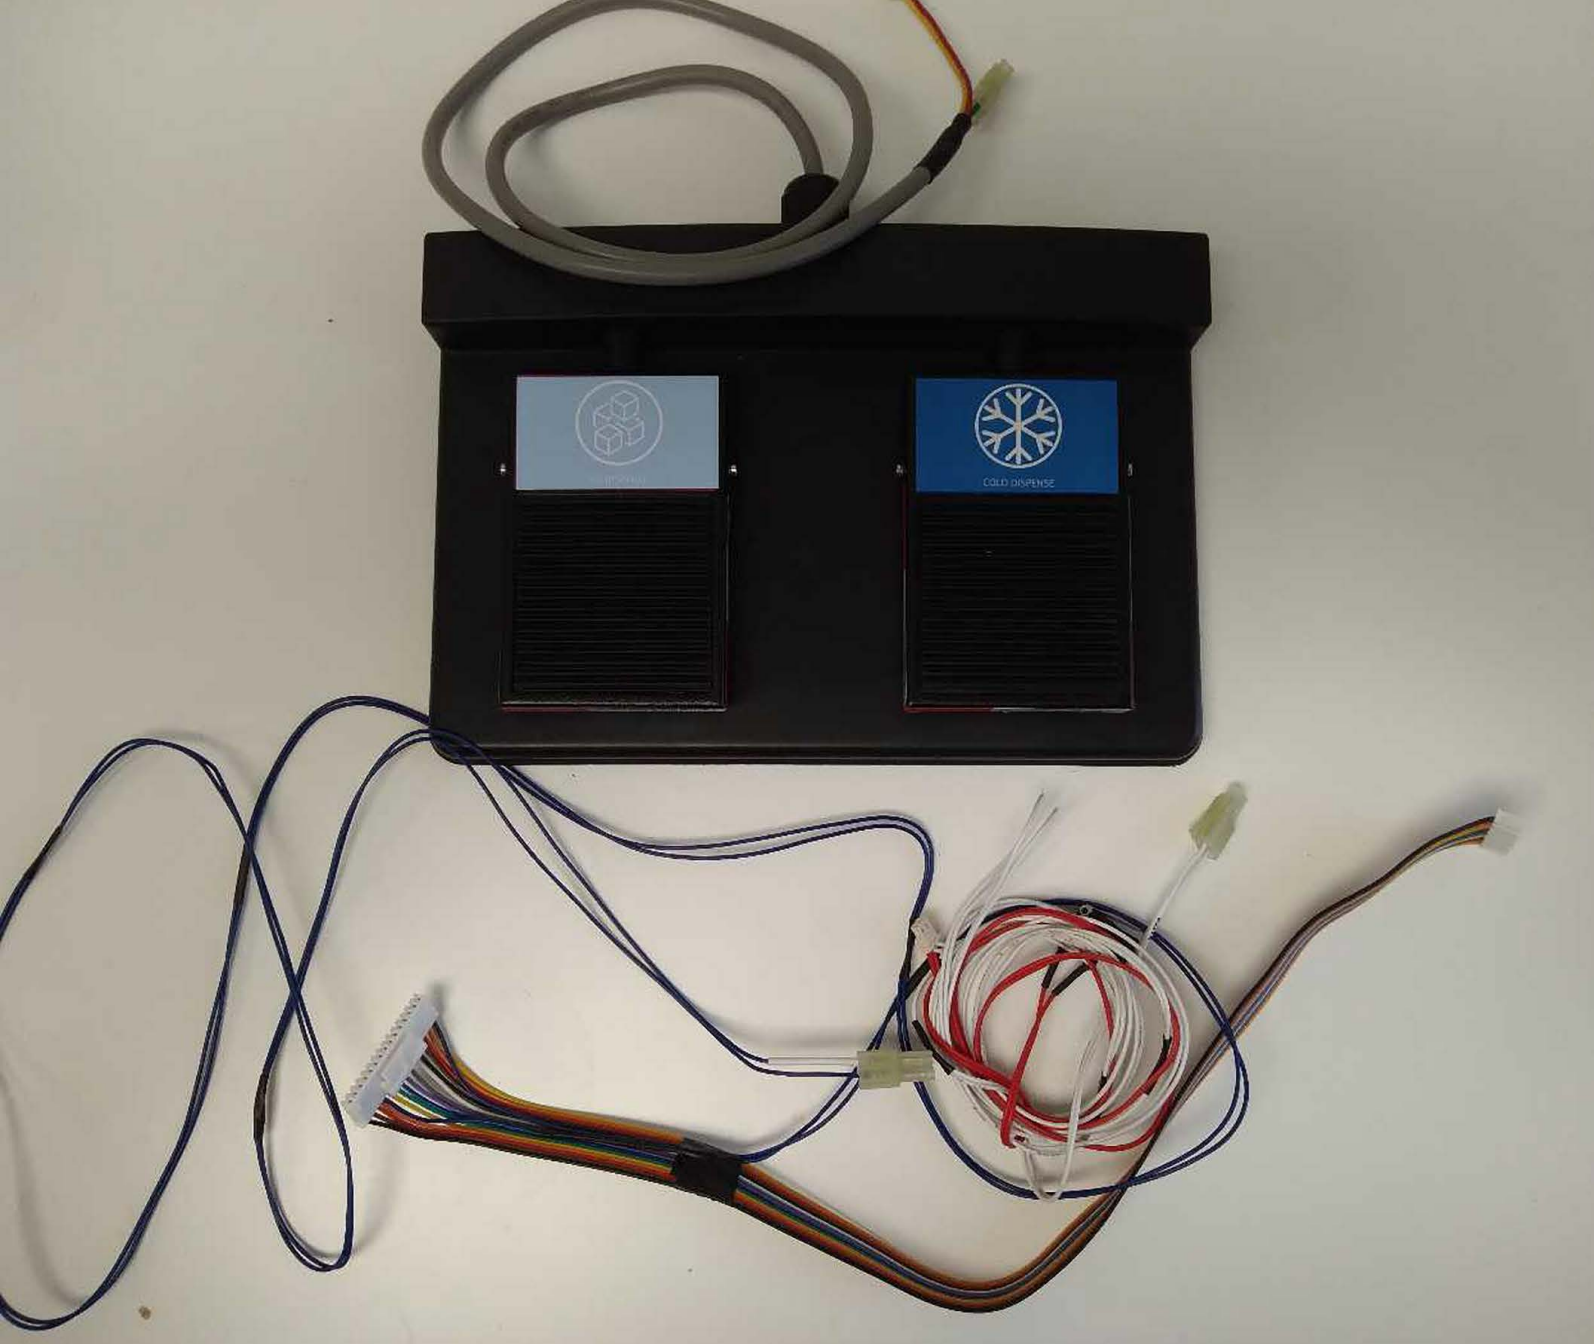

WHAT TO DO:

Step 1: Gain access to the main board

- Remove the top front panel
- Remove metal cover

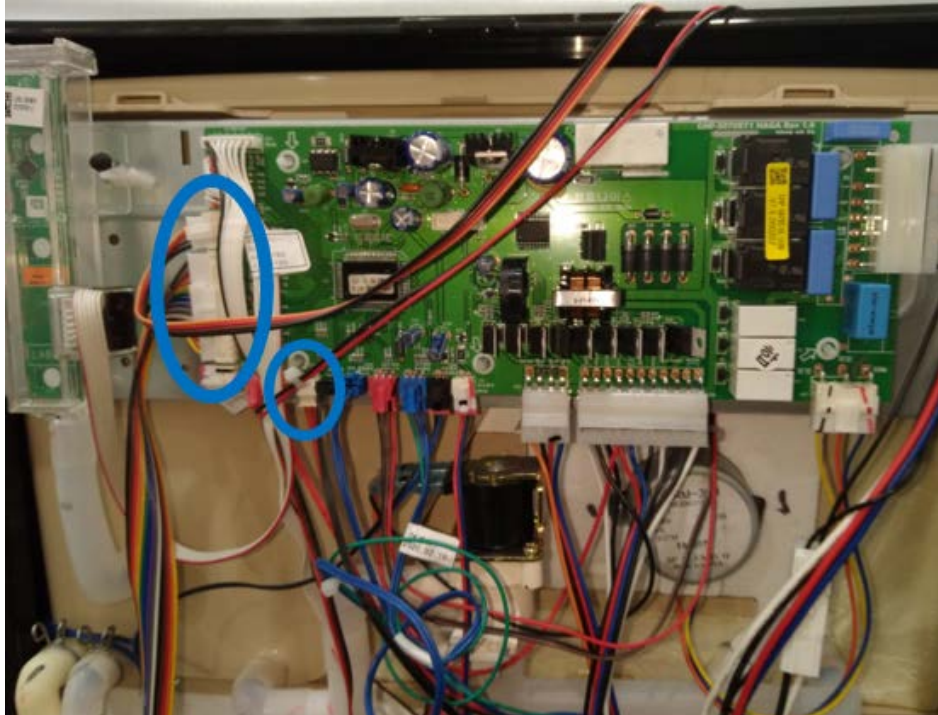

Step 2: Remove the ribbon wire that connects the display board, and the double red dispense wire that connects to the main board



Step 3: Connect the ribbon wire harness for the foot pedal to the display board and the main board.



Step 4: Remove middle front panel to gain access to the dispense micro switch. Two small screws hold it in place. Once removed, the new dispense switch can be installed.

Note: The orientation of the switch, if installed incorrectly, the unit may not operate properly.



Step 5: The wire that connects to the foot pedal should be routed through the unit to connect to the foot pedal. Be sure to connect the wire labeled "ice" to the red/ yellow wire and the white wire to the blue/ green wire.

Note: Be sure to position the pedal and route the wire from the foot pedal into the machine so that there is no excess wiring that could cause a tripping hazard.

Step 6: Test and reassemble the unit.

For additional tips or assistance, contact Wellsys technical support directly:

855-558-9796 - option 3

wellsys 