


WS15000 Touchless-Dispense Foot Pedal Installation Guide


Below are instructions for installing the WS11000 Touchless-Dispense Foot Pedal.
Part number: WS15000PDLKIT

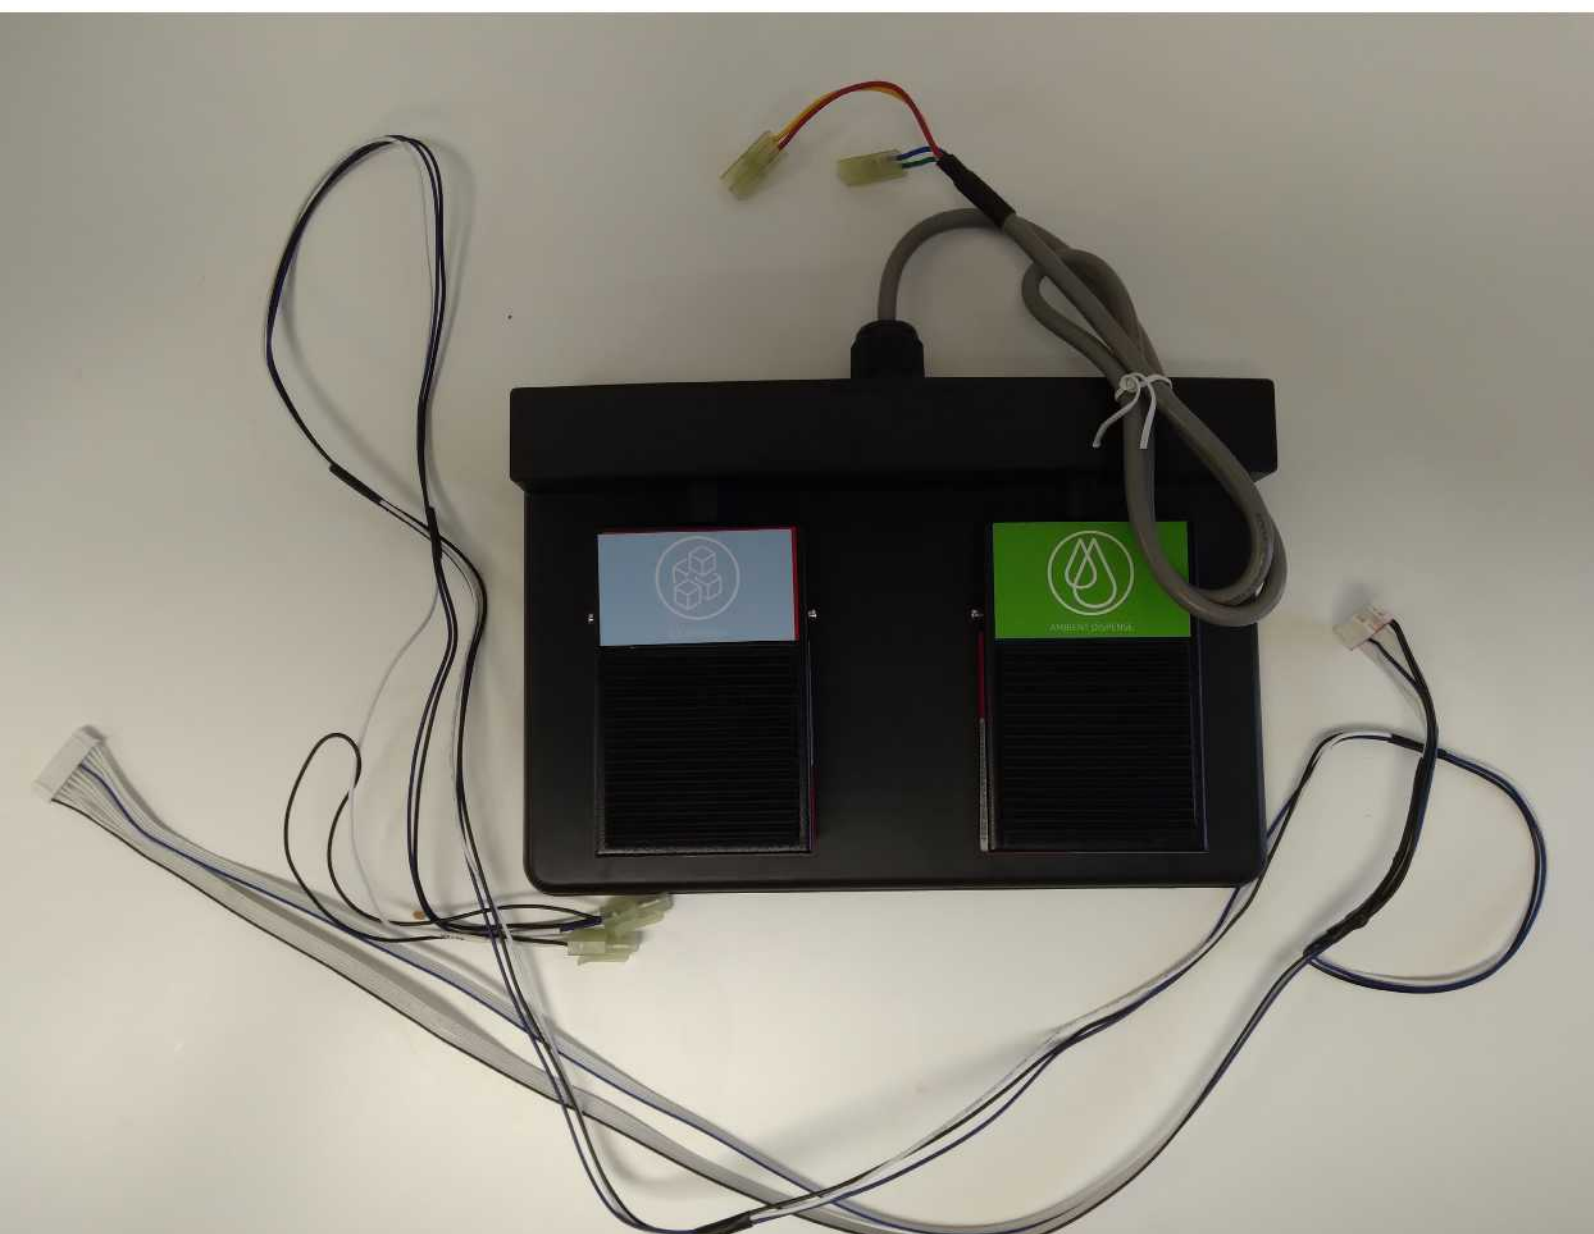


WHAT TO DO:

Step 1: Gain access to the main board


- Remove the top front panel
- Remove metal cover

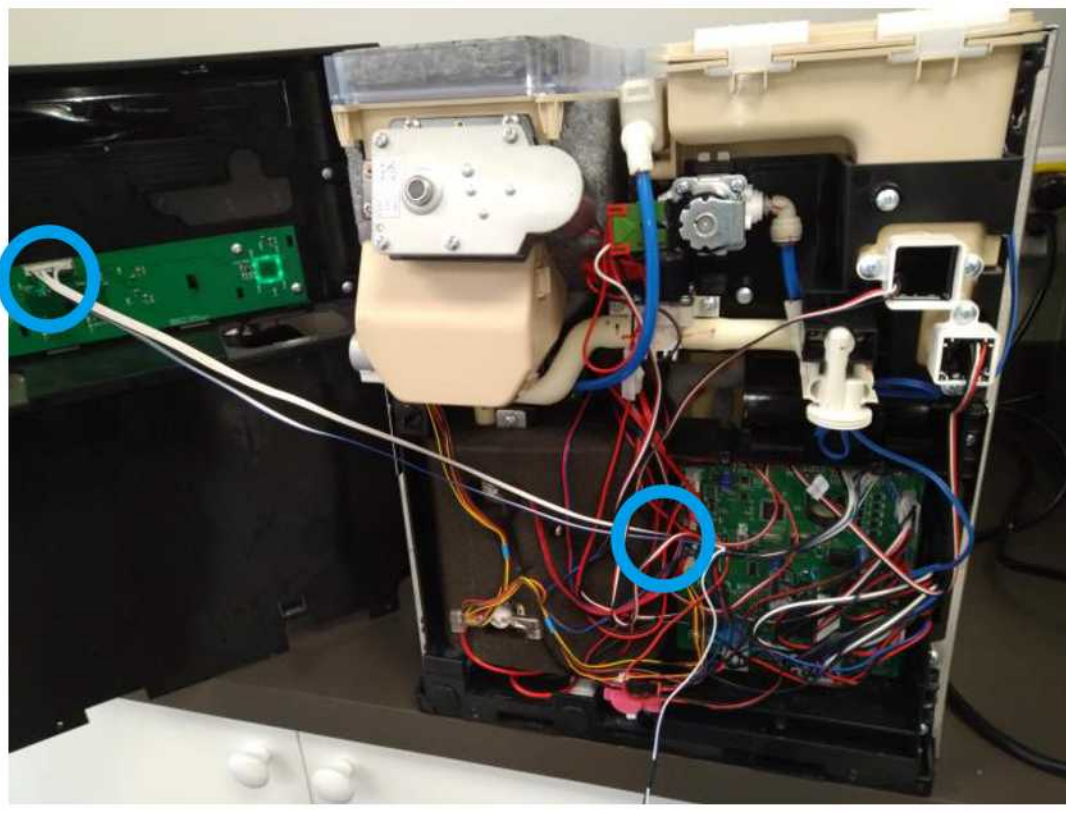

Step 2: Remove the ribbon wire that connects the display board to the main board.

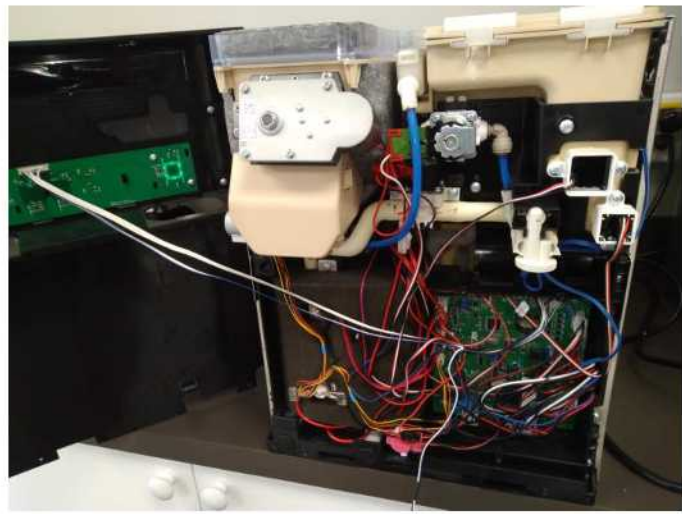

Step 3: Connect the wire harness for the foot pedal to the display board and the main board.

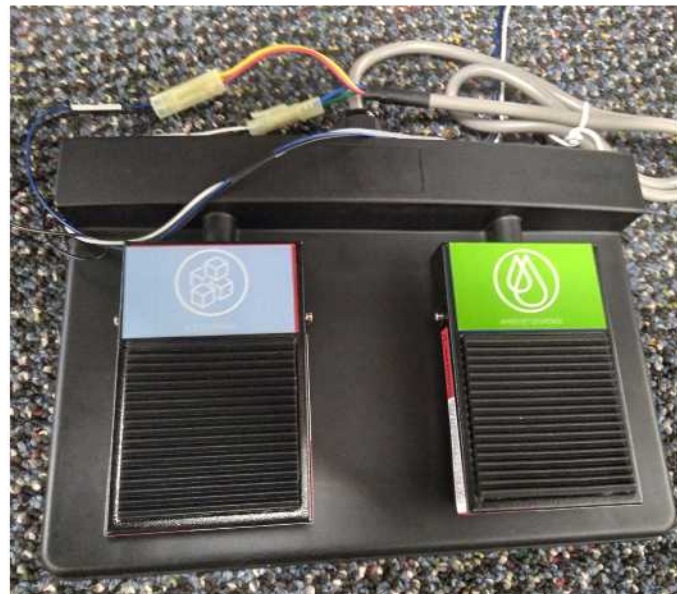

Step 4: The wire that connects to the foot pedal should be routed through the unit to connect to the foot pedal. Be sure to connect the wire labeled "ice" to the red/ yellow/ green and the white wire to the blue/ green wire.

Note: Be sure to position the pedal and route the wire from the foot pedal into the machine so that there is no excess wiring that could cause a tripping hazard.

Step 5: Test and reassemble the unit.

For additional tips or assistance, contact Wellsys technical support directly:

855-558-9796 - option 3

wellsys 