

PW1 Touchless-Dispense Foot Pedal Installation Guide

Below are instructions for installing the PW1 Touchless-Dispense Foot Pedal. It can be ordered with part number: PW1 Pedal Kit.



WHAT TO DO:




Step 1: Gain access to the display board

- Remove both side panels.
- Remove front panel, but leave the wires connected to the display board.



Step 2: Remove the ribbon wire that connects the touch pad to the display board.

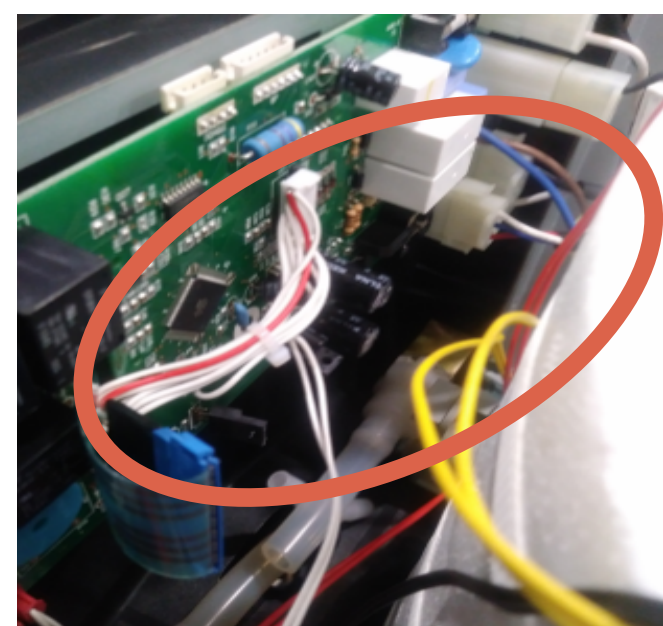

Step 3: Connect the wire harness for the foot pedal to the display board and the touch pad.

Step 5: Test and reassemble the unit.



Step 4: The wire that connects to the foot pedal should be routed through the unit to connect to the foot pedal.

Note: Be sure to position the pedal and route the wire from the foot pedal into the machine so that there is no excess wiring that could cause a tripping hazard.

For additional tips or assistance, contact Pure Water Technology technical support directly:

(855) 534-8332

